TOP AND CABINET PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

AUTOMATIC
WASHER

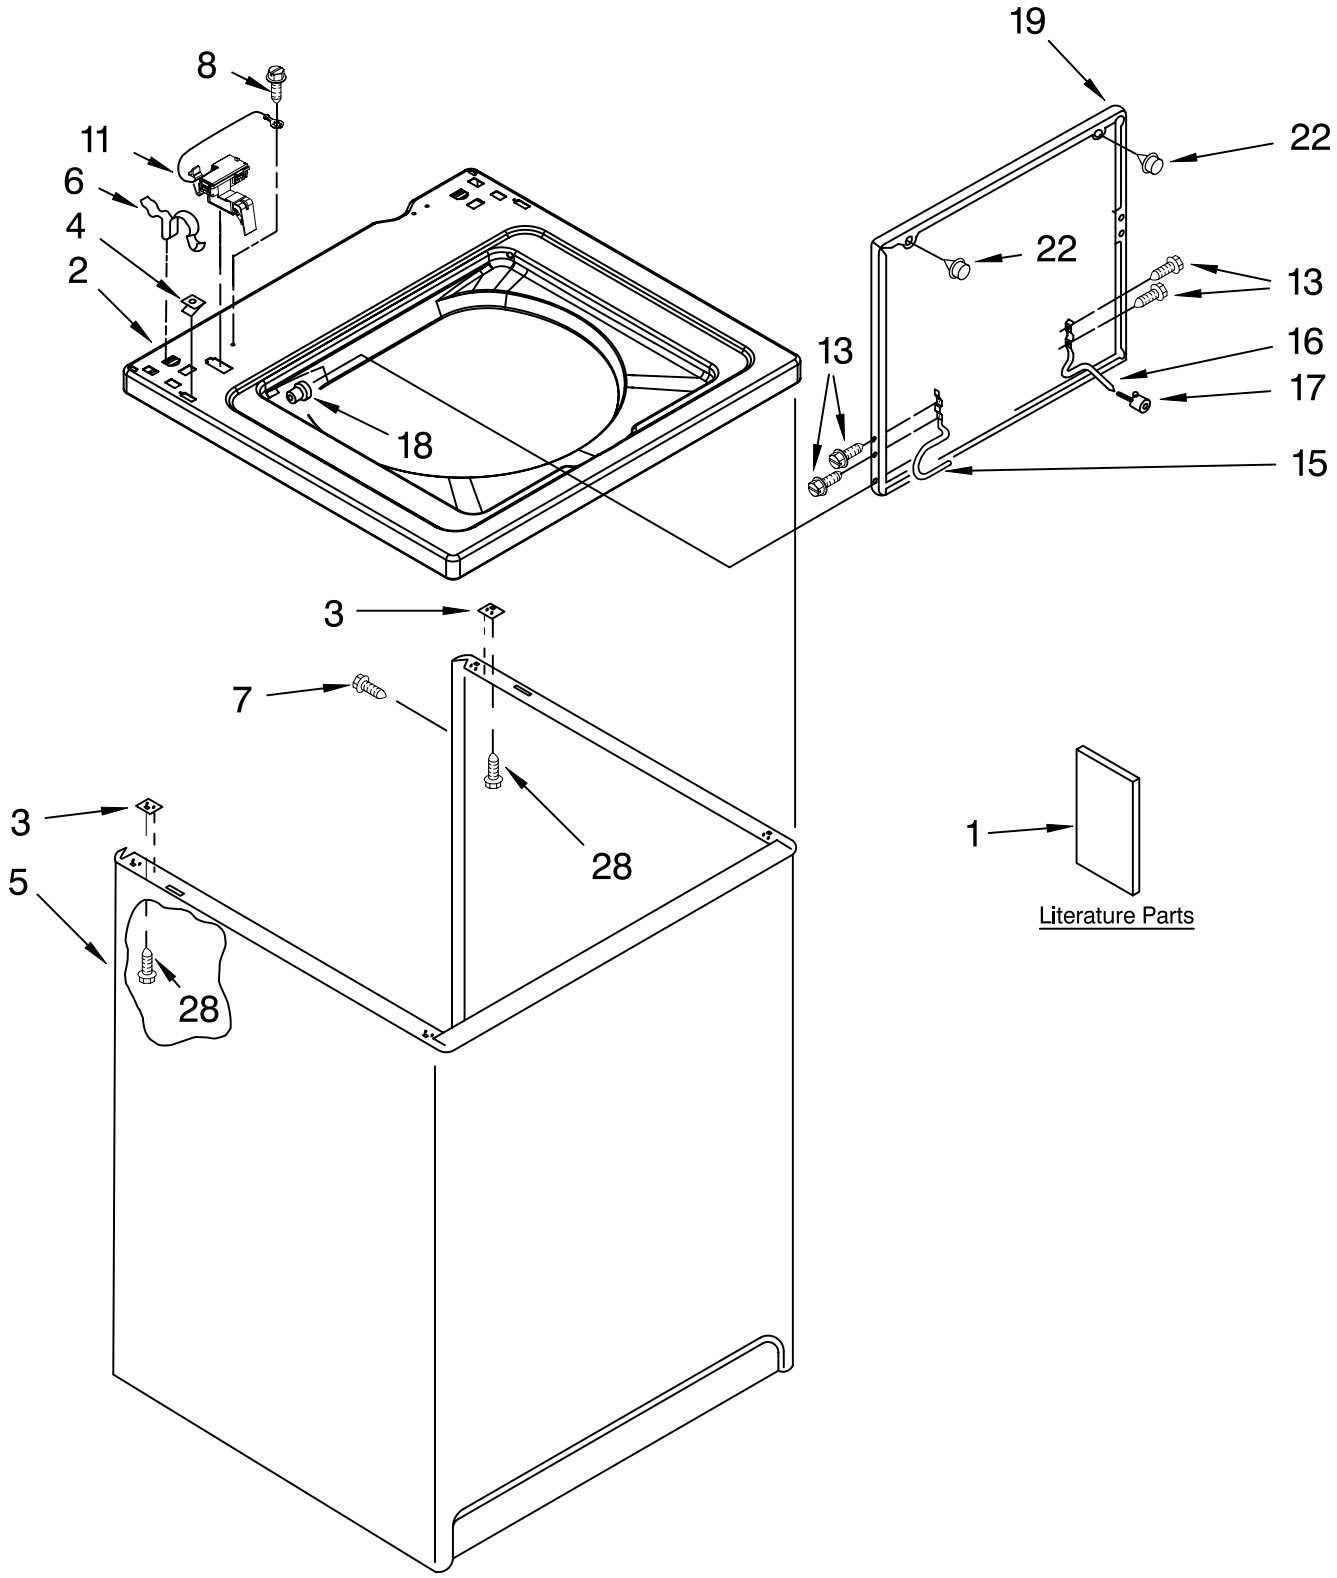

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	3956025	Installation Instructions
	3955901	Feature Sheet
	3955869	Use & Care Guide
	3956350	Energy Guide
	8541941	Wiring Diagram

Following May Be Purchased

DO−IT−YOURSELF REPAIR MANUALS

	4313896	Manual, Washer
2		Top
	8318068	White
	8318070	Biscuit
3	62750	Spacer, Cabinet To Top (4)
4	357213	Nut, Push−In (2)
5		Cabinet
	63424	White
	3954357	Biscuit
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7	3357011	Screw, 10−16 x 1/2
8	3351614	Screw, Ground
11	8318084	Switch, Lid
13	3351355	Screw, Lid Hinge Mounting (4)
15	8318088	Hinge, Lid (L.H.)
16	54583	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	8542383	White
	8542385	Biscuit
22	9724509	Bumper, Lid (2)
28	3390631	Screw, 10−16 x 3/8

CONTROLS AND REAR PANEL PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

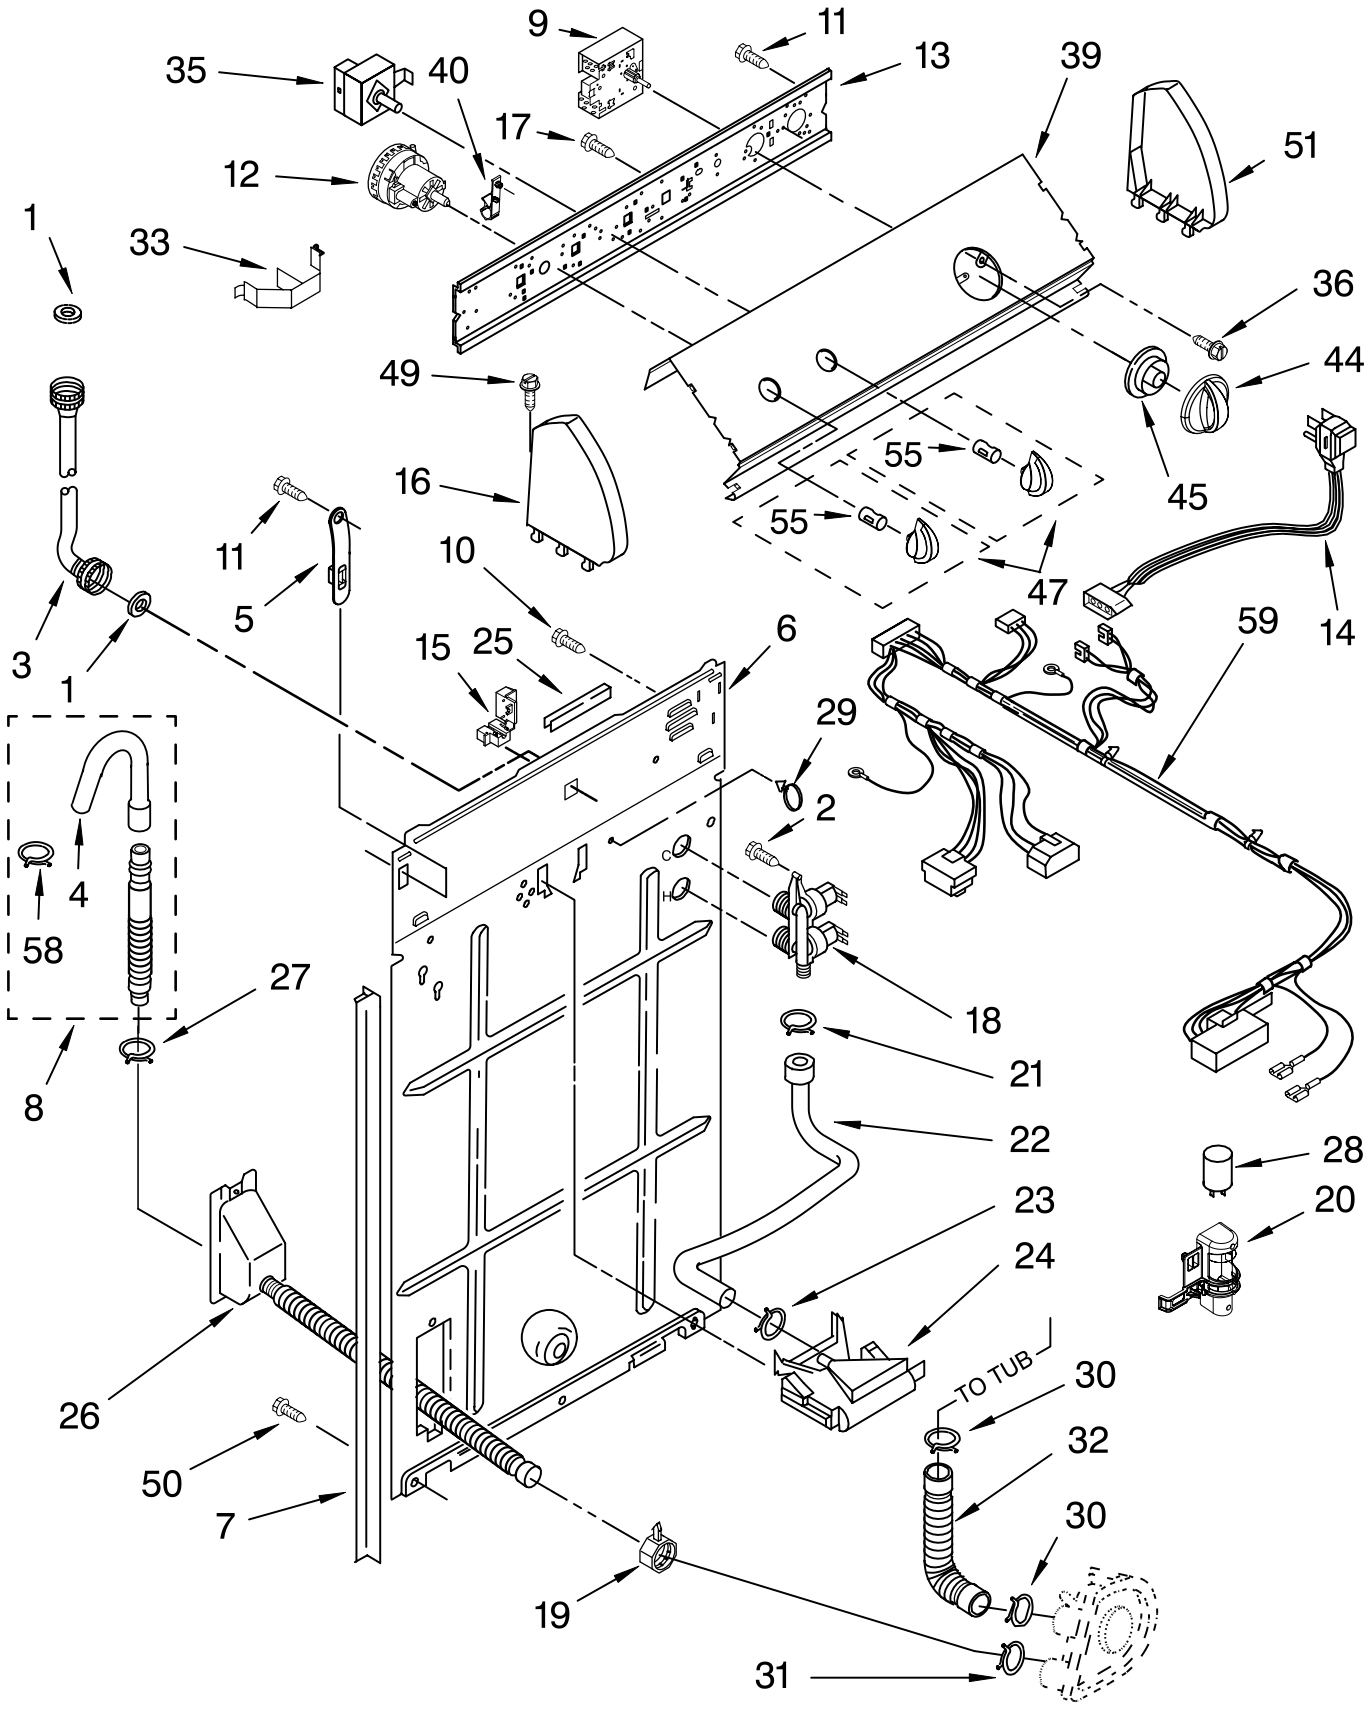

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL AND REAR PANEL PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3976300	Washer, Water Inlet Hose (4) (1−1/16 x 5/8)
2	9740848	Screw, 8−18 x 1/2
3		Hose, Water Inlet (2)
	3949374	Blue Coupler
	3949375	Red Coupler
4	3357027	Nozzle−Drain Hose
5	8318255	Strap, Console (2)
6	3357978	Panel, Rear
7	62747	Pad, Rear Panel
8	3951609	Hose, Drain (4'− 8")
	661577	Hose, Drain (9'−9") (Not Included)
	3357090	Extension, Drain Hose (21 Inches) (Not Included)
9	8541939	Timer, Control (60 Hz.) (Motor Not A Service Part)
10	3351614	Screw, Ground
11	90767	Screw, 8−18 x 3/8
12	3366847	Switch, Water Level
13	3948608	Bracket, Control
14	661661	Cord, Power (Includes Item 15)
15	3952821	Strain Relief, Power Cord
16		Cap, End (L.H.)
	8271365	White
	8271368	Biscuit
17	3400073	Screw, Ground
18	3955673	Valve, Water Mixing
19	3976395	Clamp, Hose
20	8318046	Clip, Capacitor
21	301958	Clamp, Hose
22	8541607	Hose, Vacuum Break
23	370450	Clamp, Hose
24	3347034	Break, Vacuum
25	303294	Edge Protector
26	8317940	Hose−Corrugated Assembly
27	3366912	Clamp, Hose
28	661606	Capacitor, Motor Start
29	8559320	Restraint, Hose
30	3363366	Clamp, Hose
31	8317496	Clamp, Hose
32	3951449	Hose, Pump To Tub
33	8055003	Clip, Harness & Pressure Hose
35	661614	Switch, Water Temperature
36	3400818	Screw, Timer Mounting
39		Panel, Console
	3956567	White
	3956568	Biscuit
40	8317975	Retainer, Harness
44		Knob, Timer
	8544943	White
	8544944	Biscuit
45		Dial, Timer
	8544947	White
	8544948	Biscuit
47		Knob, Control
	8544935	White
	8544936	Biscuit
49	388326	Screw, 8−18 x 1.25 (Panel to Top)
50	62863	Screw, 10−16 x 3/8
51		Cap, End (R.H.)
	8271359	White
	8271362	Biscuit
55	8536939	Clip, Knob
58	3366913	Clamp, Drain Hose
59	3956951	Harness, Wiring (For Detail See Pages 9 & 10)

AGITATOR, BASKET AND TUB PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

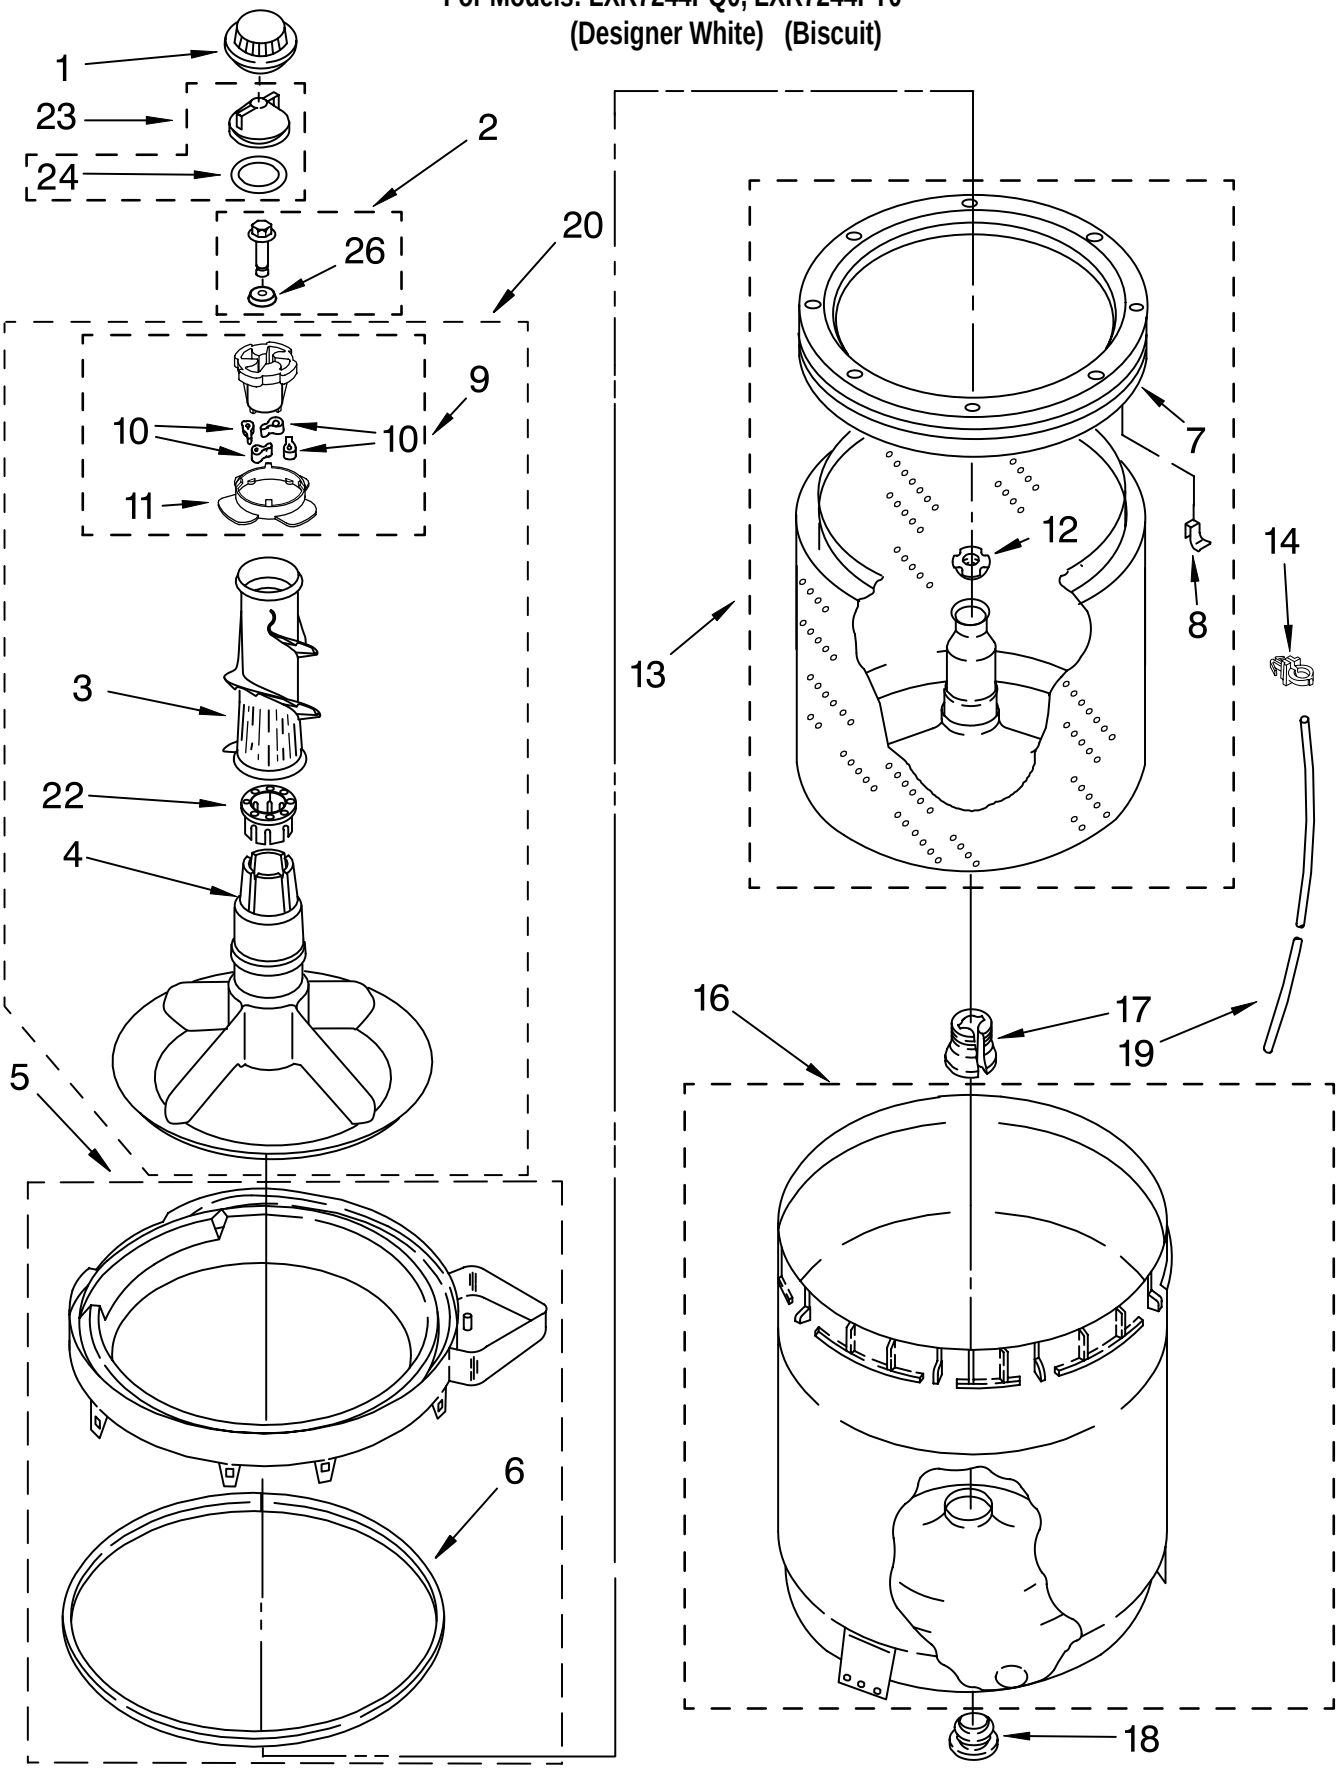

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3355758	Cap, Agitator
2	358237	Screw & Washer (5/16−24 x 1)
3	3349019	Clothes Mover
4	3350830	Agitator
5	3360611	Tub Ring & Gasket
6	3359586	Gasket, Tub Ring
7	3956205	Balance Ring
8	8519815	Clip, Balance Ring (8)
9	3363663	Cam Driven
10	3366877	Dog, Agitator Clutch (4)
11	3363661	Bearing−Driven Cam
12	21366	Nut, Spanner
13	3956206	Basket & Balance Ring
14	2219077	Clip, Pressure Switch Hose
16	63125	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch
20	3350829	Agitator (Complete)
22	3350389	Spacer, Thrust
23	3354733	Cap, Barrier
24	3348855	Seal, Inner Cap
26	3949550	Washer

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

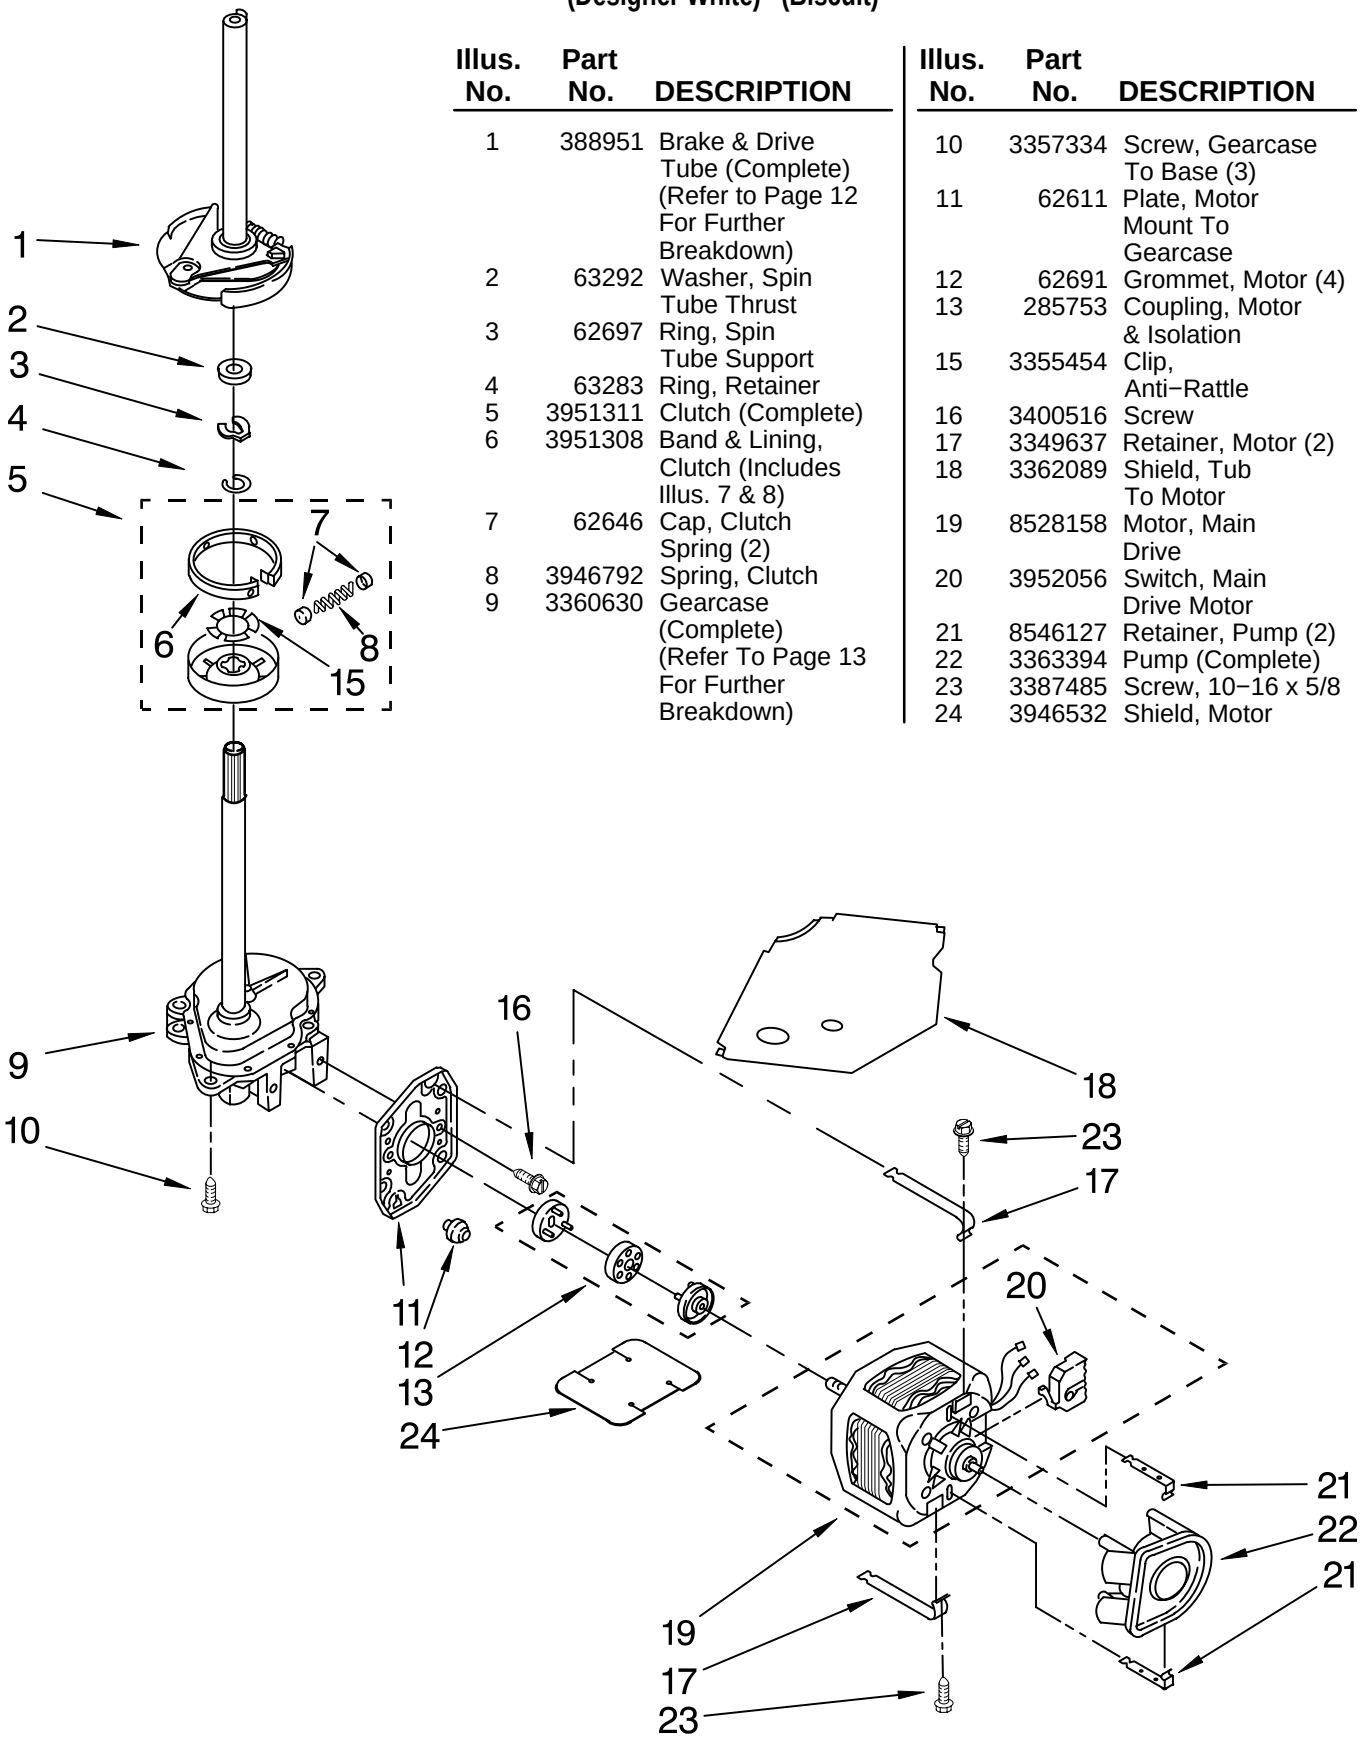

Illus. No.	Part No.	DESCRIPTION
1	388951	Brake & Drive Tube (Complete) (Refer to Page 12 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Page 13 For Further Breakdown)

Illus. No.	Part No.	DESCRIPTION
10	3357334	Screw, Gearcase To Base (3)
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	285753	Coupling, Motor & Isolation
15	3355454	Clip, Anti−Rattle
16	3400516	Screw
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	8528158	Motor, Main Drive
20	3952056	Switch, Main Drive Motor
21	8546127	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10−16 x 5/8
24	3946532	Shield, Motor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

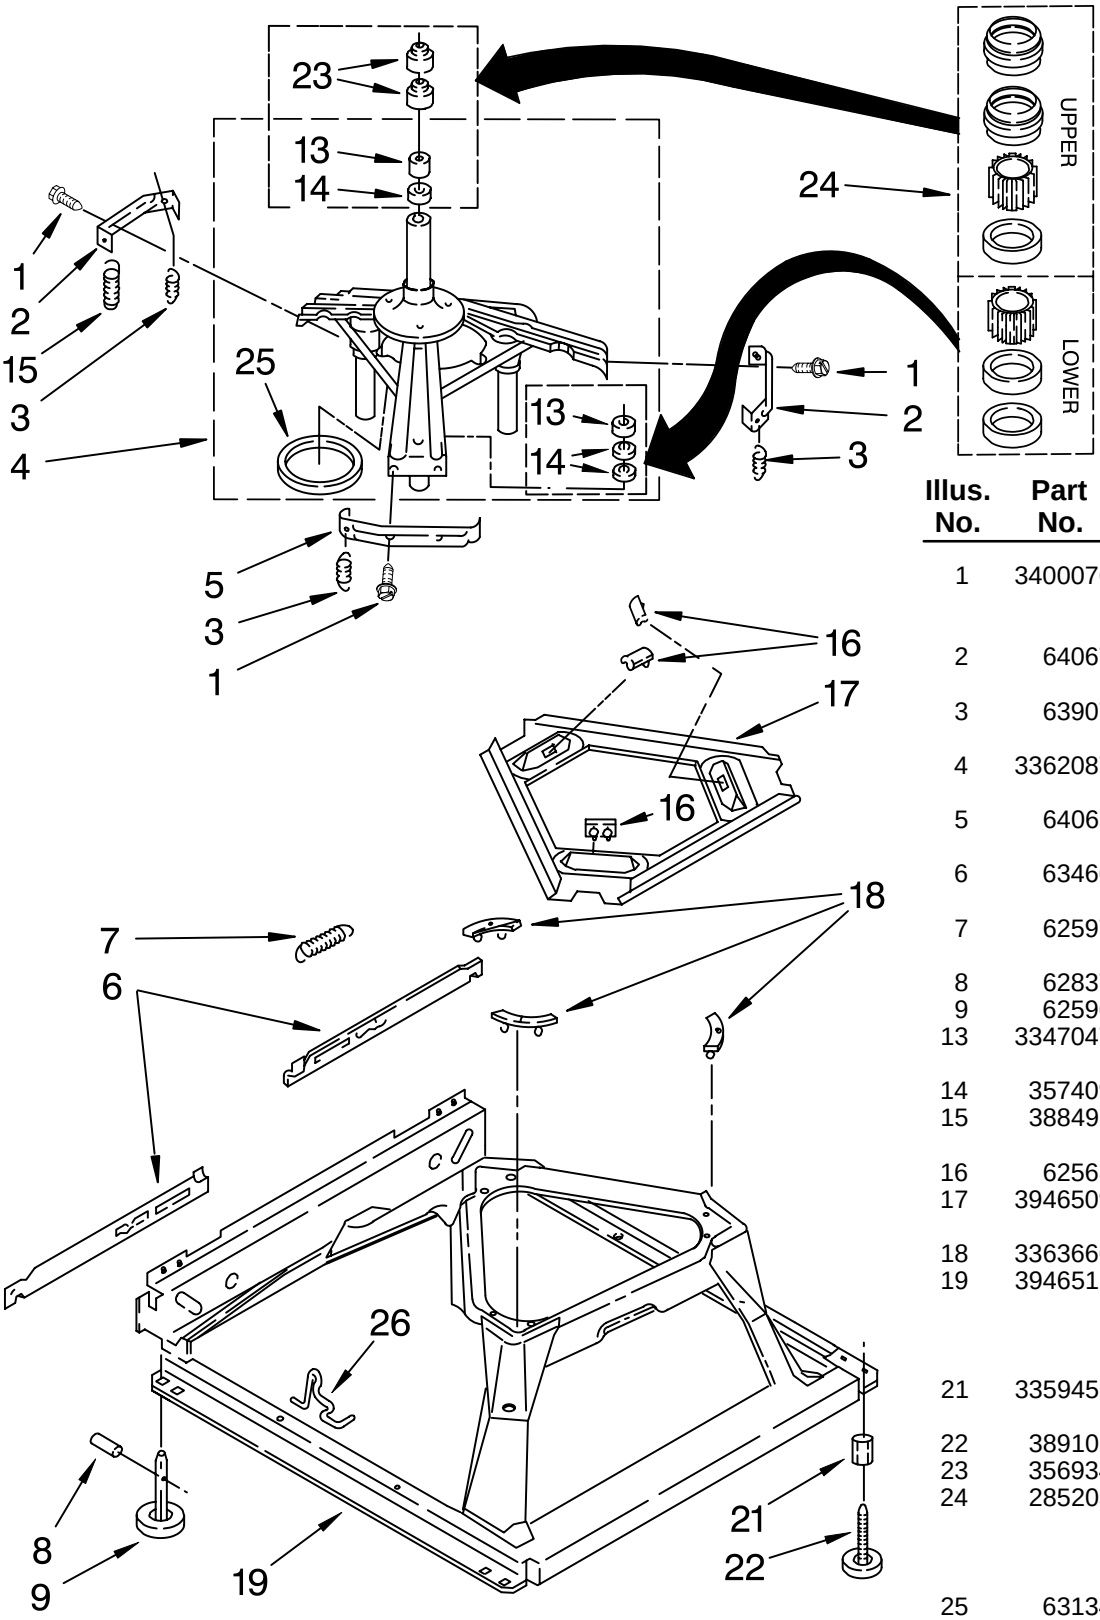

Illus. No.	Part No.	DESCRIPTION
1	3400076	Screw, Bracket Mounting (10−32 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring Suspension,(3)
4	3362087	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	388492	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension (Includes Illus. 16)
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus, 6, 7, 8, 9, 16, 17,18 & 26.)
21	3359452	Nut, Lock (2) (3/8−16)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

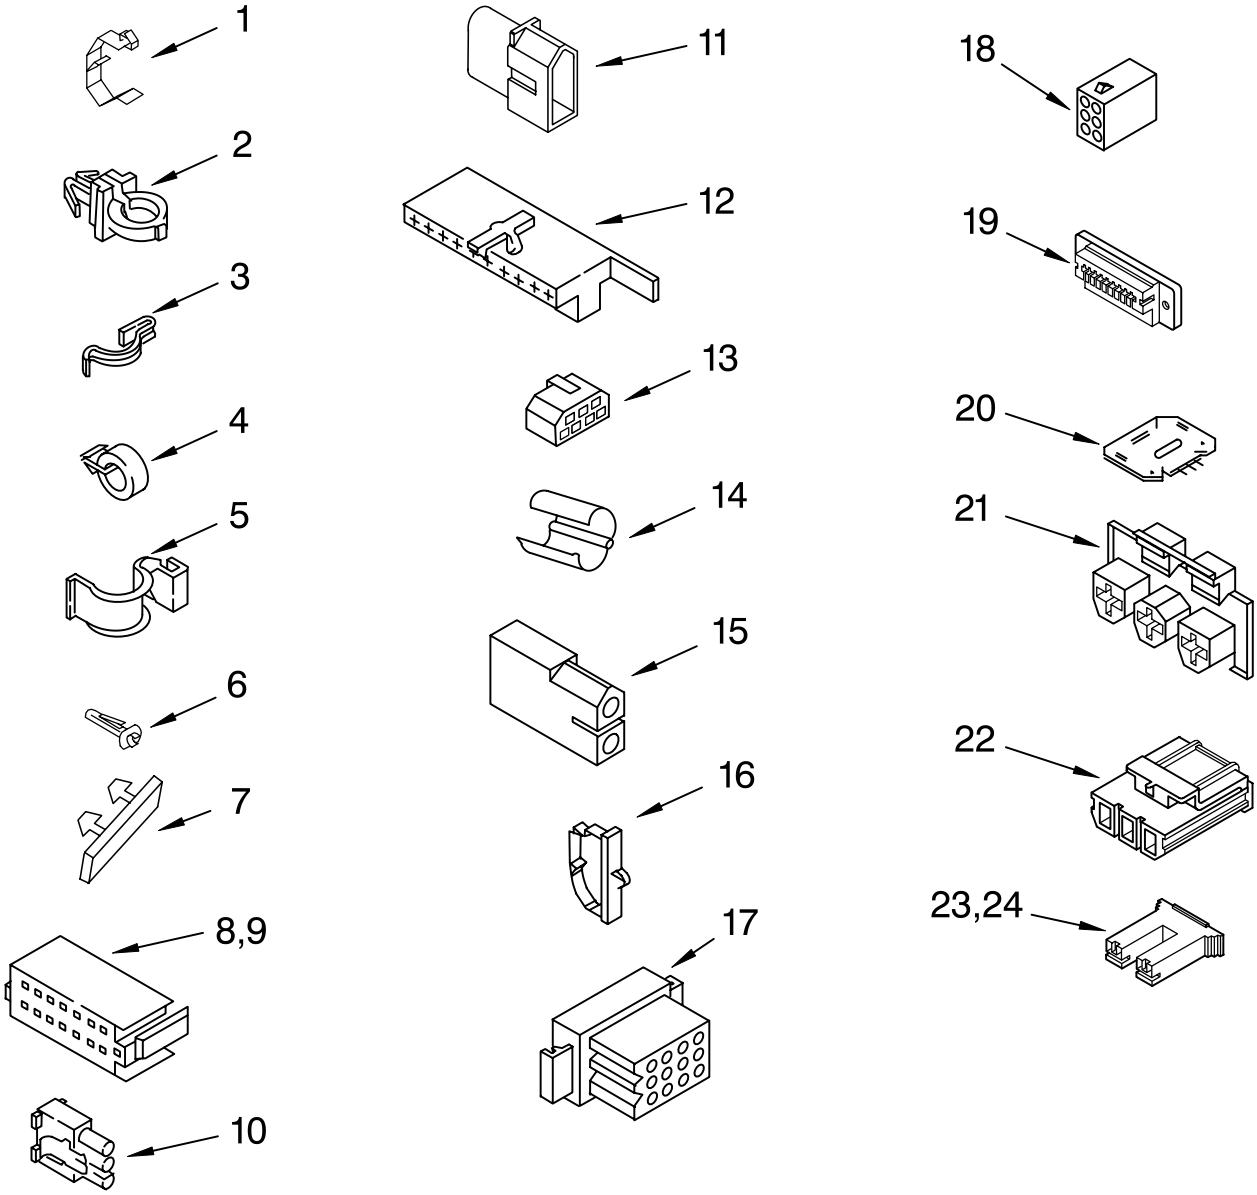

WH2H

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LXR7244PQ0, LXR7244PT0

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness
2	388498	Clip, Harness
3	3347812	Clip, Harness
4	3352501	Clip, Harness
5	90016	Clip, Harness
6	3390496	Clip, Harness
7	389379	Retainer, (Suds Models)
8	3948614	Timer, Block Disconnect (White)
9	352089	Timer, Block Disconnect (Black)
10	62889	Receptacle, Terminal (3−Way) (Lid Switch) (Use Term.94613) Or 94614.)
11	353424	Plug, Terminal (3−Way) (Power Cord) (Use Term.94613)
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)
13	3347243	Block, Disconnect (Use Term. 352088)
14	63523	Protector
15	717252	Connector (2−Way) (Use Term.94614)
16	3352944	Clip, Harness
17	3390423	Block, Disconnect (12−Way) (Timer) (Use Term. 94613)
18	3347730	Receptacle (6−Way) (Use Term. 94613)
19	3349494	Connector, Etc
20	3407125	E.T.C. Control
21	3948617	Connector (T.P.A.) (3−Circuit) (Lid Switch)
22	3360056	Connector (T.P.A) (3−Circuit) (Pressure Switch)
23	3354925	Block, Connector (Cold Valve)
24	3354926	Block, Connector (Hot Valve)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2H

WATER SYSTEM PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

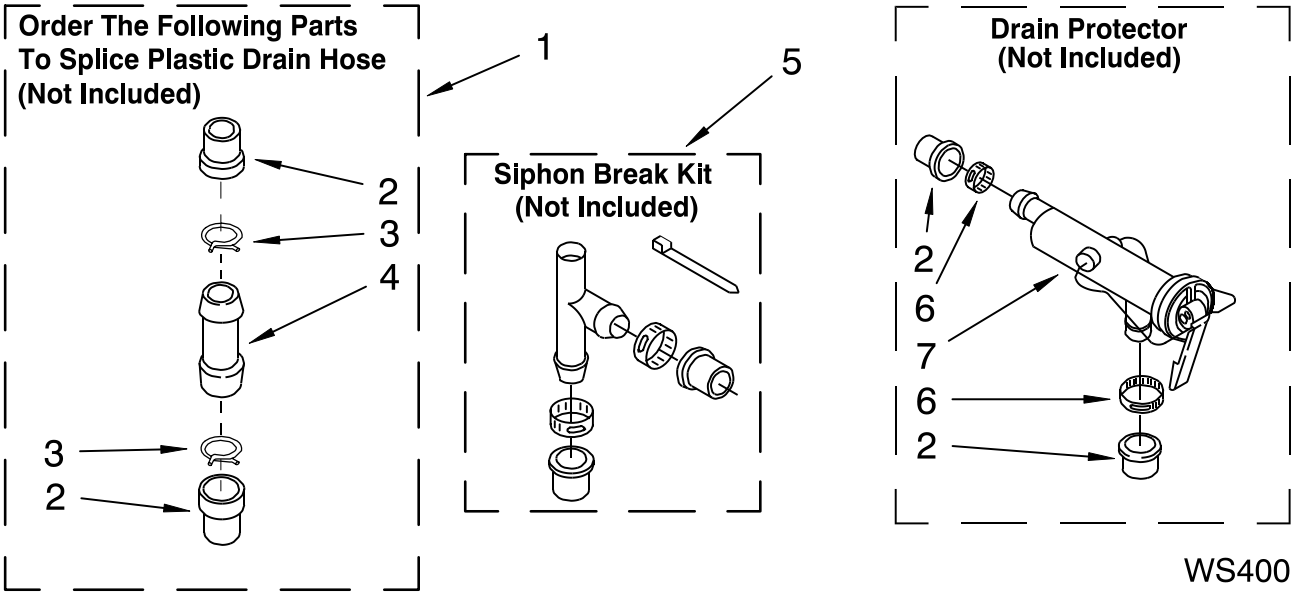

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

BRAKE AND DRIVE TUBE PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

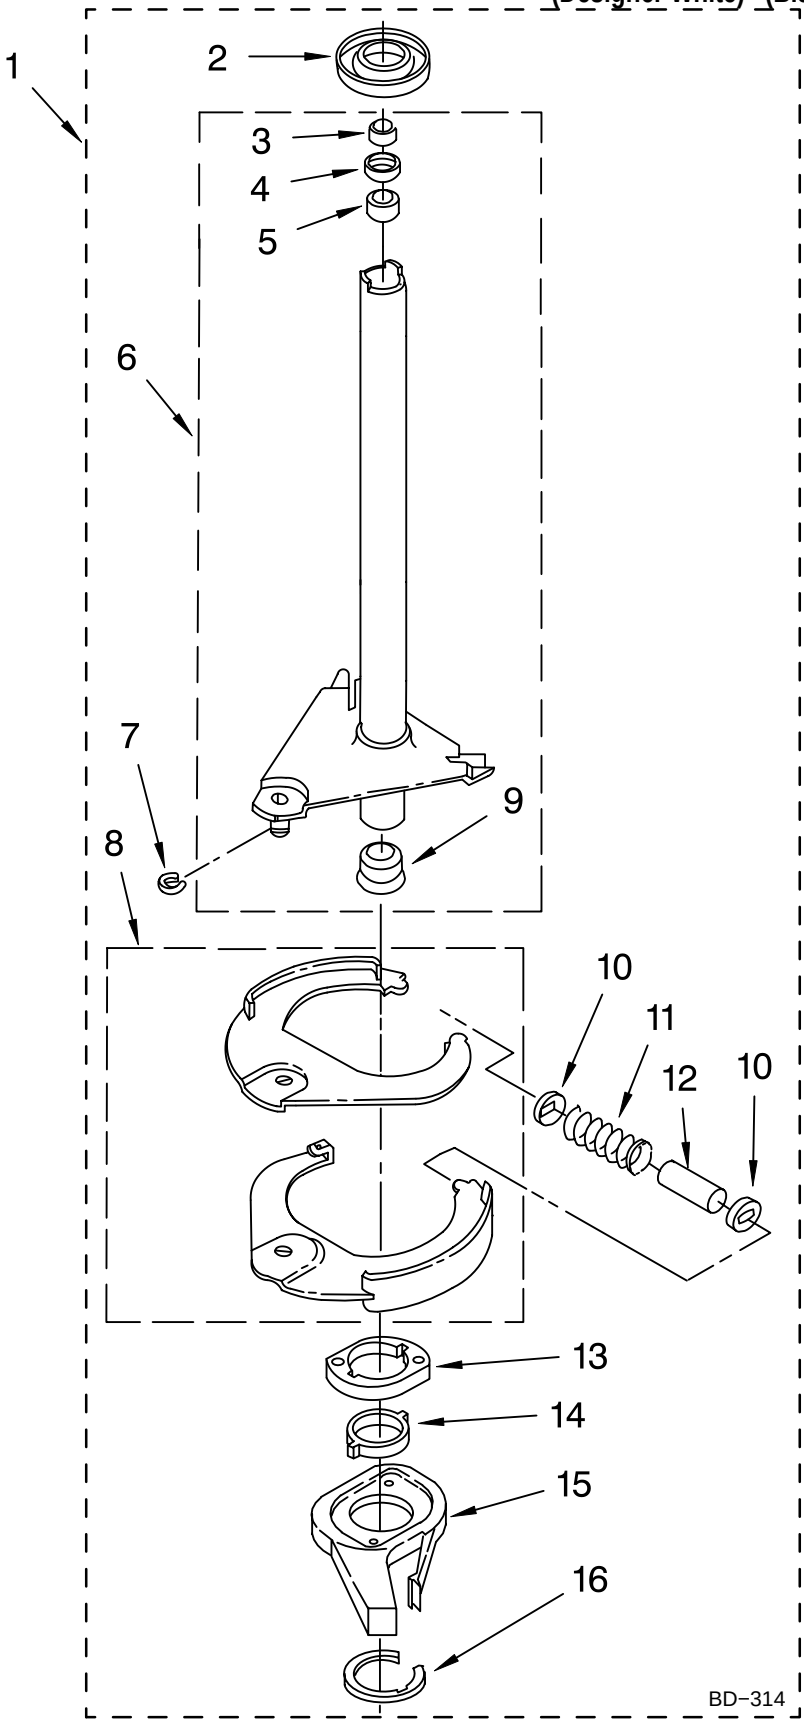

Illus. No.	Part No.	DESCRIPTION
1	388951	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Brake Shoe
9	62703	‘‘T’’ Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	62647	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

	285208	Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

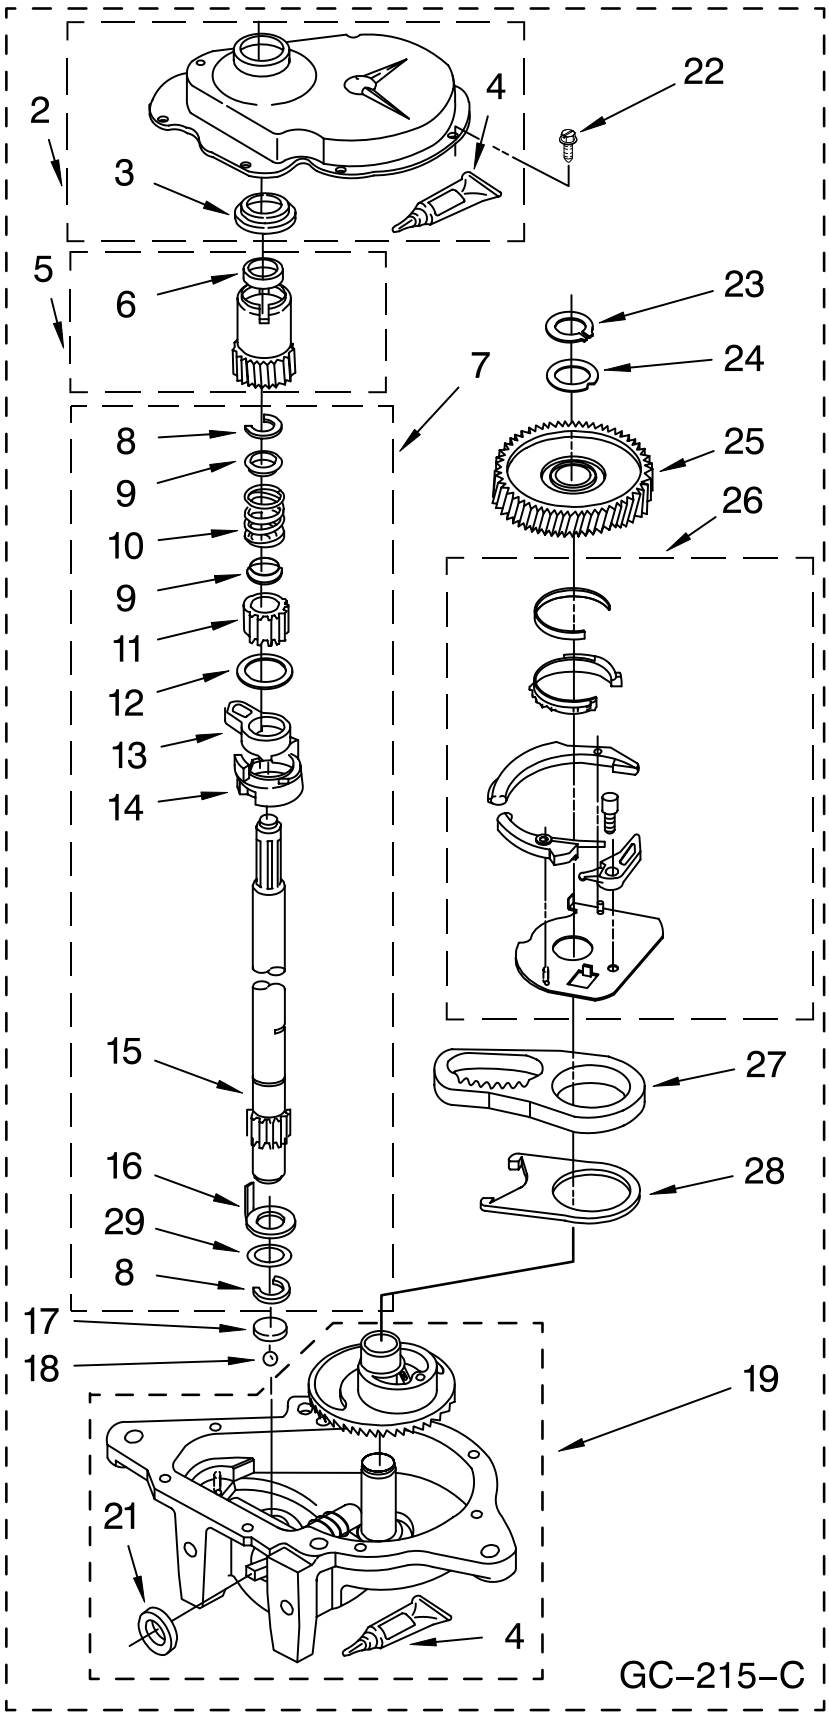

Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10−24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: LXR7244PQ0, LXR7244PT0
(Designer White) (Biscuit)

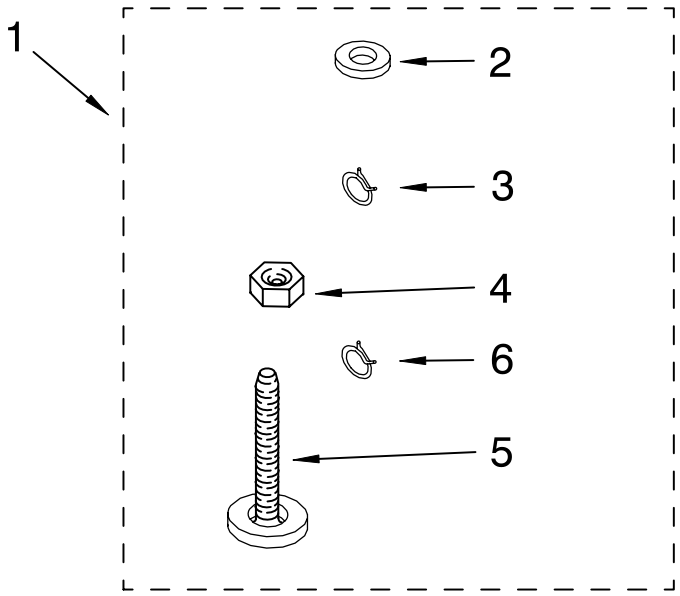

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous Parts Bag
2	3976300	Washer, Inlet Hose (4) (1−1/16 x 5/8)
3	3366912	Clamp, Hose
4	3359452	Nut, Lock (2) (3/8−16)
5	389102	Foot, Front (2)
6	3366913	Clamp, Hose

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH−UP (1/2oz.)		
	72017	White
	4392899	Biscuit
PAINT, PRESSURIZED SPRAY (12 oz.)		
	350938	Primer, Gray
	350930	White
	4392901	Biscuit

Illus. No.	Part No.	DESCRIPTION
PAINT, BULK (1 qt.)		
	799344	White (Uncut)
	4392900	Biscuit (Uncut)
OIL		
	350572	Oil, Gearcase (16 Oz.)
LUBRICANT		
	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

Illus. No.	Part No.	DESCRIPTION
SEALER		
	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
ACCESSORY PARTS		
	63580	Fabric Dispenser
	367031	Drain Protector
	285320	Siphon Break Kit